

SILT FENCE

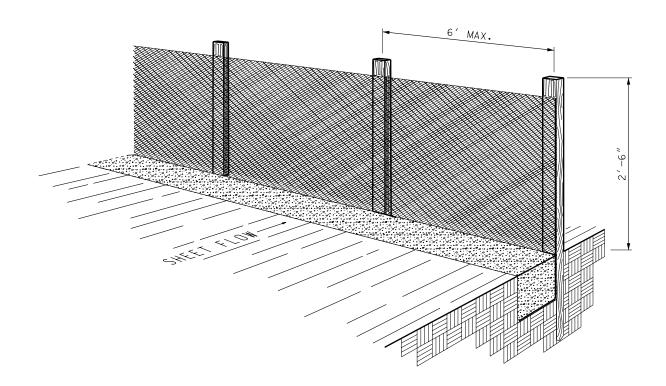


ENTRENCH THE BOTTOM 12" OF SILT
FENCE SECURELY IN THE GROUND. AFTER
INSTALLATION, FIRMLY PULLING UPWARD
ON THE TOP OF THE FENCE SHOULD NOT
DISLODGE IT.

SECTION


PERSPECTIVE VIEW

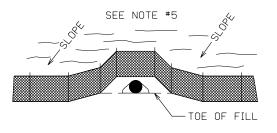


AROUND A PIPE OUTLET

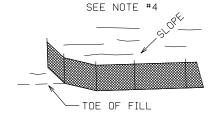

AT END OF SILT FENCE

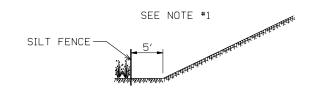

AT TOE OF FILL SLOPE

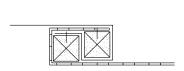

SEE NOTE #6

SPLICES (TOP VIEW)

SILT FENCE INSTALLATIONS

NOTES FOR SILT FENCE:

- 1. WHERE PERMITTED, POSITION THE SILT FENCE 5' BEYOND THE TOE OF SLOPE.
- 2. TO AVOID CREATING LOW POINTS ALONG THE SILT FENCE, ALIGN THE FENCE ALONG THE CONTOUR AS MUCH AS POSSIBLE. WHERE EXCESSIVE RUNOFF WILL ACCUMULATE AT A LOW POINT, PROVIDE AN OPENING IN THE FENCE AND INSTALL A SEDIMENT TRAP.
- 3. WHEN EXCAVATING THE TRENCH, USE MACHINERY THAT WILL MINIMIZE DISTURBANCE.
- 4. TO PREVENT RUNOFF FROM FLOWING AROUND THE ENDS OF THE SILT FENCE, RUN THE ENDS OF THE FENCE UP SLOPE.
- 5. DO NOT PLACE SILT FENCE ACROSS POTENTIAL CONCENTRATED FLOWS (e.g., PIPE OUTLETS, DRAINAGE CHANNELS, CUT DITCHES).
- 6. AVOID USING SPLICES ALONG THE FENCE AS MUCH AS POSSIBLE. IF A SPLICE IS NECESSARY, BEFORE POUNDING IN THE END POSTS, OVERLAP THE END POSTS AND TWIST 180 DEGREES.
- 7. MAINTAIN A PROPERLY FUNCTIONING SILT FENCE THROUGHOUT THE DURATION OF THE PROJECT OR UNTIL DISTURBED AREAS HAVE BEEN VEGETATED.
- 8. WHEN A STORM EVENT DEPOSITS SEDIMENT BEHIND THE FENCE, REMOVE THE SEDIMENT AND PLACE IT IN A STABLE AREA APPROVED BY THE ENGINEER.
- 9. IN AREAS THAT HAVE BEEN SEEDED AND MULCHED, REMOVE SILT FENCE UNLESS THEY ARE PROTECTING A WETLAND OR WATER BODY.

RANSPORTATION
BRIDGE CONSTRUCTION

TEMPORARY EROSION CONTROL (SILT FENCE)

STD DWG EN 2